


PROMASTER CITY


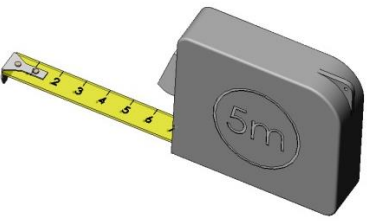


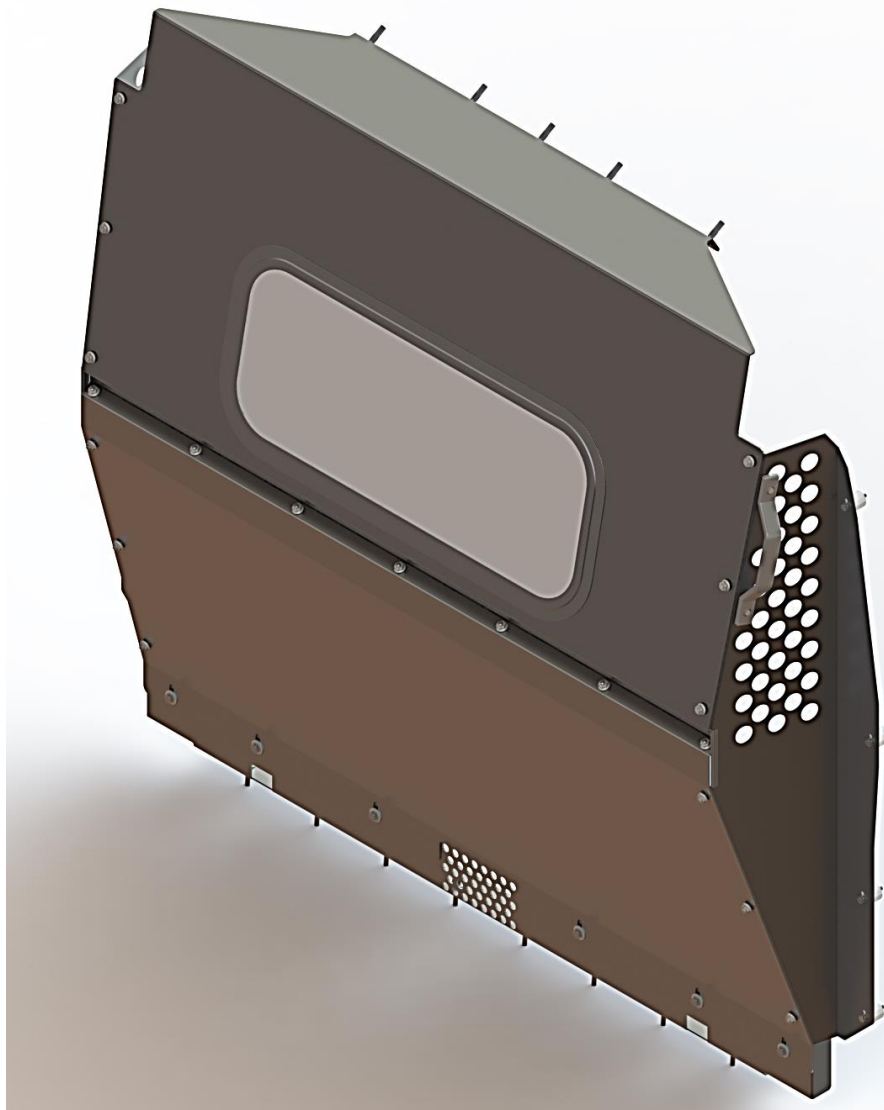


Installation guide



Contents

1. Installation tools required.....	2
2. Partition.....	3
2.1. Remove Overhead Plastic Covers – two types of covers available (white-without OEM partition and black- with OEM partition).....	3
2.2. Remove Plastic Caps on the floor of the vehicle.....	4
2.3. Verify if the threads are in good condition.....	4
2.6. Assemble the side wings with the lower panel as per drawing.....	6
2.7. Add fasteners as per drawing.....	6
2.9. Cut 1” square/dia from the plastic cover to uncover the threads.....	7
2.10. Bring partition into the vehicle. (It can be half-assembled if installed by only 1 person)....	8
2.11. Screw the ¼-20 bolts to the top of the partition.....	8
2.12. Fix the side wings to the vehicle.....	9



1. Installation tools required.

	<p>MEASURING TAPE</p> 
<p>RATCHET</p> 	<p>7/16", 1/2", 9/16" SOCKET</p> 
<p>WRENCH</p> 	<p>DRILL</p> 
<p>PLUS NUT TOOL</p> 	

2. Partition.

Tip: Make sure you have the drawings provided with the partition.


2.1. Remove Overhead Plastic Covers – two types of covers available (white-without OEM partition and black- with OEM partition).

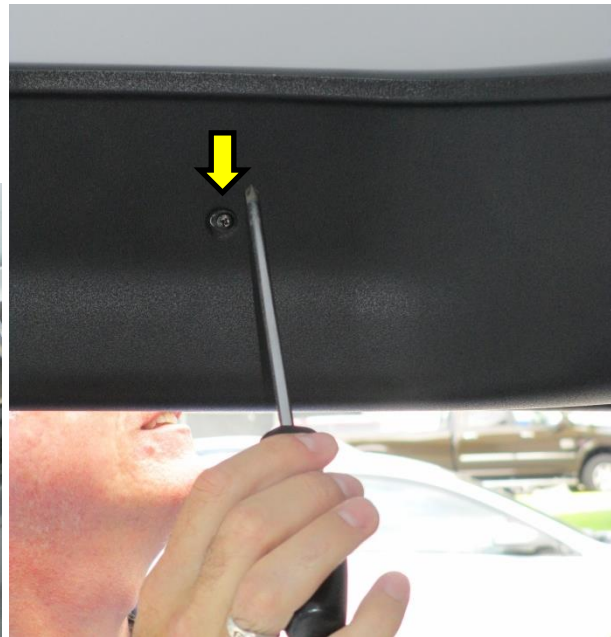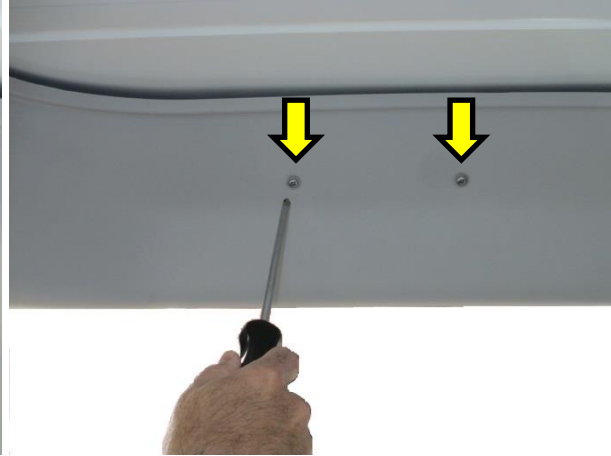

2.2. Remove Plastic Caps on the floor of the vehicle.

2.3. Verify if the threads are in good condition.

Tip: You can test with the corresponding bolts included in the partition fastener kit. For reference – see the drawing of the partition.

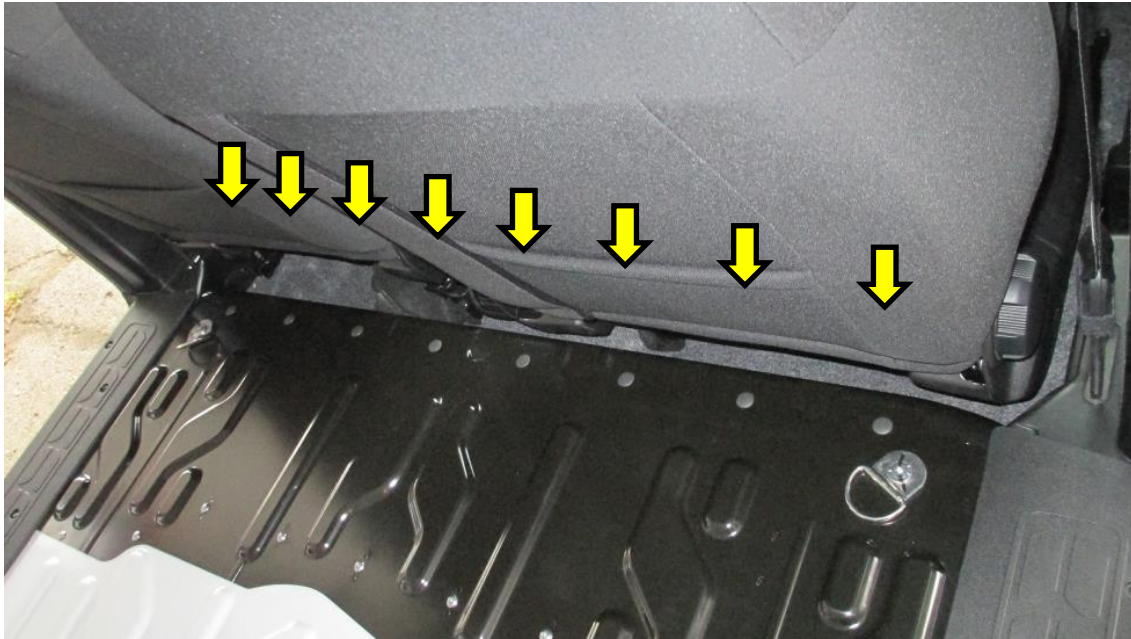

2.4. Position the floor bracket and align with the holes on the floor.



2.5. Install two fasteners in the middle of the bracket. Do not tighten yet.




2.6. Assemble the side wings with the lower panel as per drawing.



2.7. Add fasteners as per drawing



2.8. Add the Edge Trim and make sure all the fasteners are installed as per drawing.

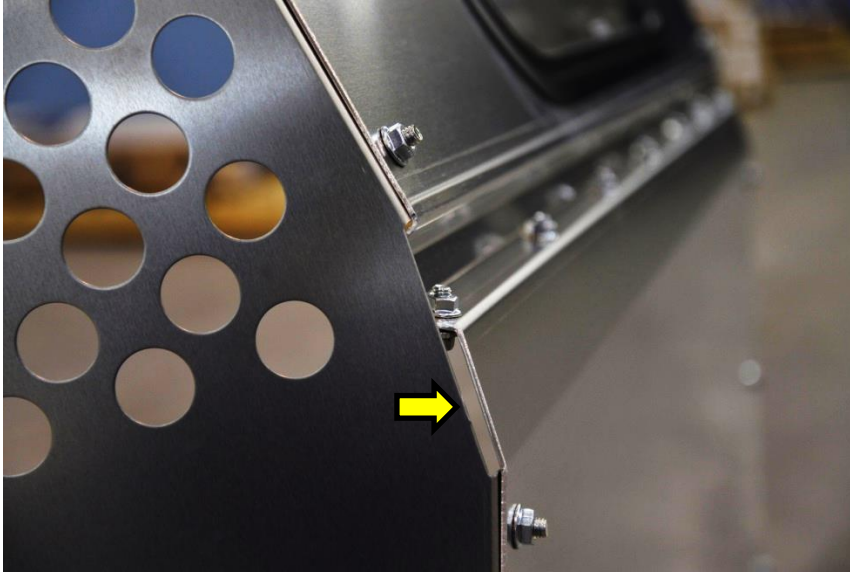


2.9. Cut 1" square/dia from the plastic cover to uncover the threads.



2.10. Bring partition into the vehicle. (It can be half-assembled if installed by only 1 person)




2.11. Screw the ¼-20 bolts to the top of the partition.

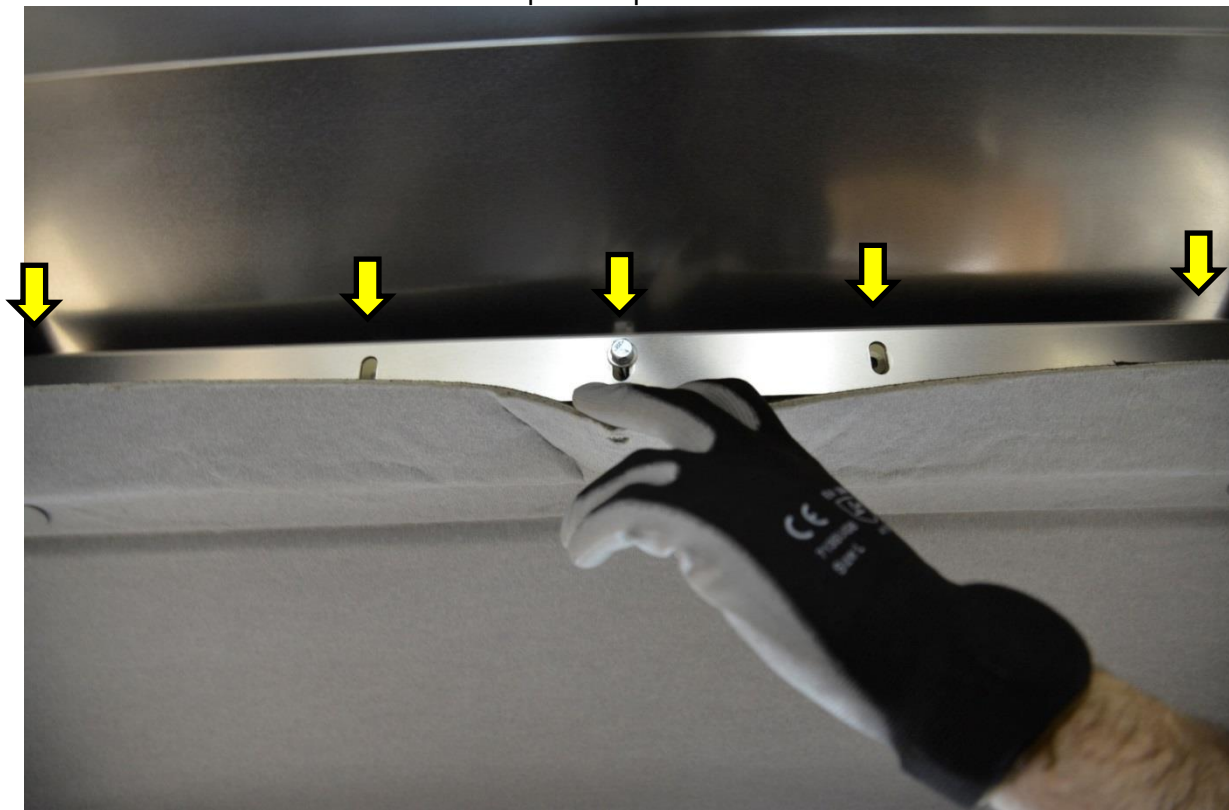

2.12. Fix the side wings to the vehicle.



2.13. Install the missing bolts and tighten every fastener.

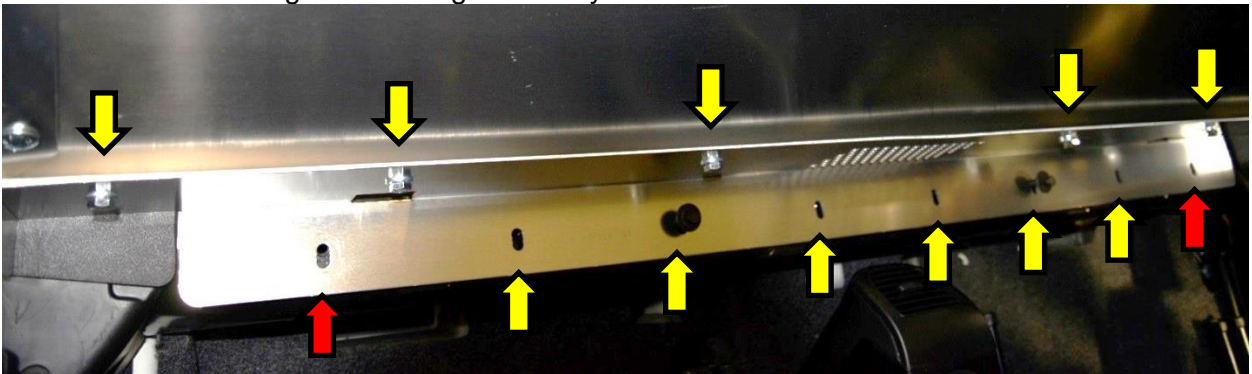

 - There might be a bracket from Install Kit - 60" shelving. Check all products that need to be installed.