


Sortimo

By

KNAPHEIDE

RAM PROMASTER CITY PARTITION INSTALLATION INSTRUCTIONS

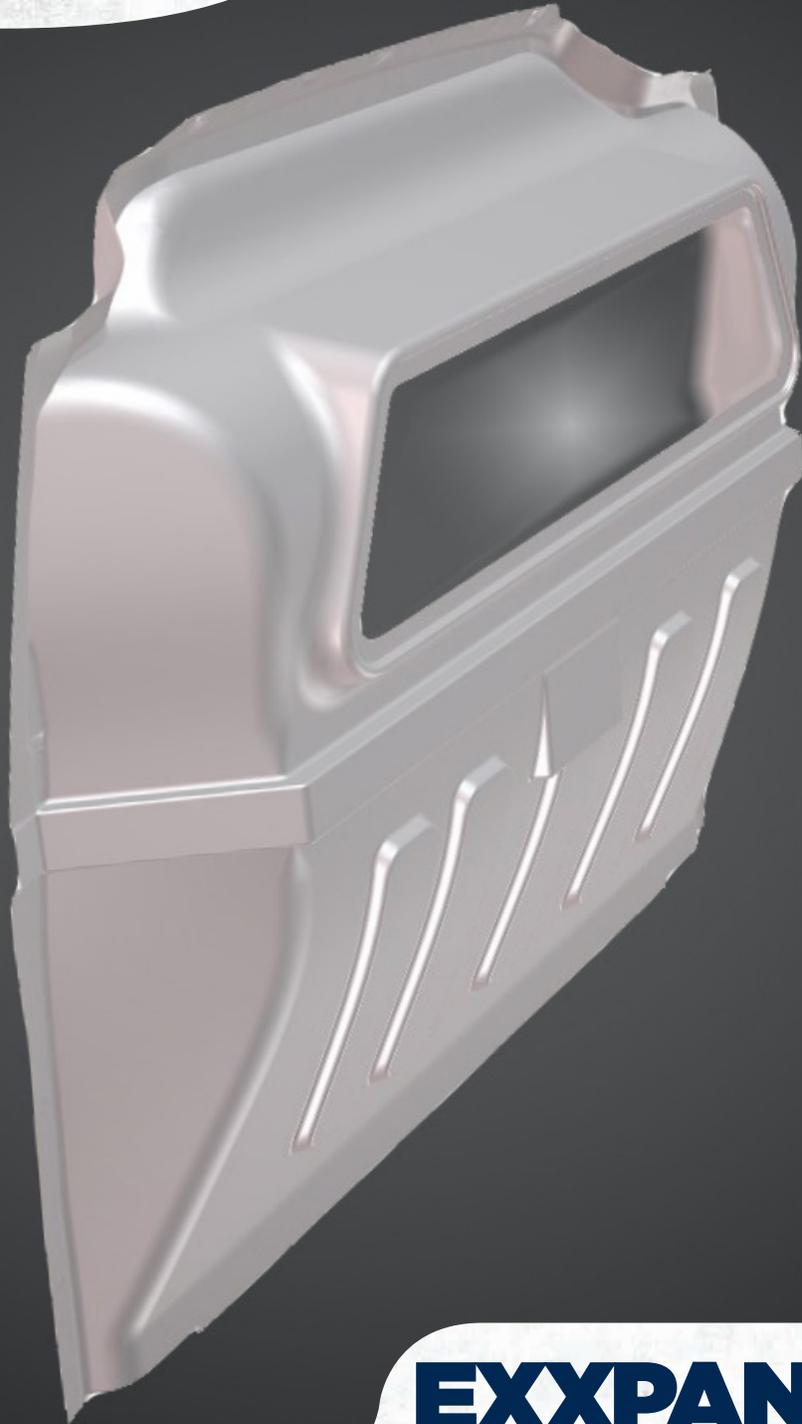

EXXPANDTM

www.sortimo.knapheide.com



The following instructions detail the procedure for installing a Sortimo By Knapheide Partition in a Ram Promaster City van. This guide is intended to walk you through a step by step installation.

Contents

Hardware	3
Partition Preparation	4-7
Partition Installation	8-9

Warranty and Limitation of Liability

SORTIMO N.A. warrants its van interior equipment to be free from defects in material and workmanship, under normal use and service for a period of three years or 36,000 miles, whichever occurs first, after the date of delivery to the original retail purchaser, when installed by an authorized SORTIMO Distributor and/or SORTIMO N.A. Upfit facility. Products not installed by an authorized SORTIMO Distributor and/or SORTIMO Upfit facility will not be subject to any warranty whatsoever and ANY AND ALL WARRANTIES WHATSOEVER RELATIVE TO SUCH SALES ARE HEREBY FULLY AND EXPRESSLY DISCLAIMED. This warranty only provides for the following remedy: repairs at the point of SORTIMO N.A.'s main place of business or any of its Distributor locations, or part replacements in part or in full to correct any defects related to material and workmanship. This warranty does not apply to products not installed by an authorized SORTIMO Distributor and/or SORTIMO N.A. Upfit facility.

HARDWARE



(4) Hex Flange Screw
M8-1.25 x 25
Part# 31043320




(12) Sealing Washer
.43 x 1.00
Part# 12051132



(12) Hex Flange Bolt
M6-1.00 x 25
Part# 31568910



(7) Flanged Whiz Nut
M6-1.0
Part# 31568940

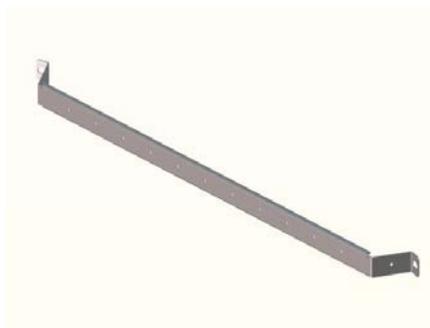

(1) B-Pillar Brace
Part# 26264747



(7) Carriage Bolt
M6-1.00 x 20
Part# 31568930

PARTITION PREPARATION

1.1 Position the B-Pillar brace (26264747) as shown.



1.2 At the right and left outer holes of the bracket, drill 3/8" holes through the partition.



1.3 Temporarily secure the bracket to the partition with two M6-1.00 x 25 flange bolts and nuts (one of each on either side).



PARTITION PREPARATION



1.4 Use the bracket as a template to drill 1/4" holes through the partition in the locations shown in Step 1.5.



1.5 Drill 1/4" holes through the partition in locations indicated here.



1.6 Secure the bracket to the partition with seven M6-1.00 x 20 carriage bolts and nuts. Remove and reuse the nuts and bolts from Step 1.3.

PARTITION PREPARATION

1.7 Drill 1/4" pilot holes through the dimples along the left and right edges of the partition (three each side).



1.8 Drill 1/4" pilot holes through the four dimples at the top edge of the partition.



1.9 Drill 1/4" pilot holes through the four dimples in the bottom edge of the partition.



PARTITION PREPARATION



1.10 Re-drill each hole around the perimeter of the partition to 3/8”.



1.11 The partition is now ready to install in the van.

PARTITION INSTALLATION

2.1 Open the side cargo doors and remove the plastic trim pieces above the door openings.



2.2 Remove the front half of the door seal on the left and right cargo door openings.




2.3 Open the side doors on the van and insert the partition into the van from the side.



PARTITION INSTALLATION



2.4 Slide the partition forward to the front of the cargo area just behind the cab seats.

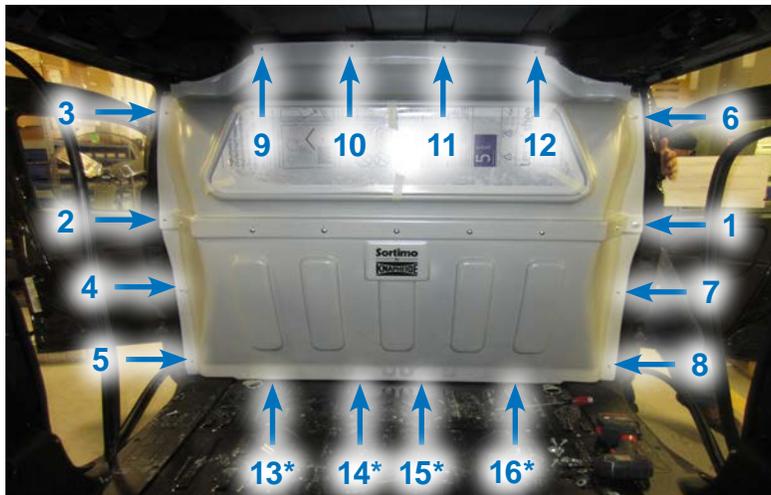

2.5 Push both sides forward to fit snugly against the right and left B-pillars of the van.

 Follow the sequence shown here to secure the partition to the B-pillars with M6-1.00 x 25 flange bolts and .43 x 1.00 sealing washers.

*Secure the partition to the van floor with four M8-1.25 x 25 flange bolts at the bottom of the partition.  Tighten all bolts securely.



2.6 Re-install the plastic trim pieces and door seal removed in Steps 2.1 and 2.2.



EXXPANDTM

sortimo.knapheide.com | 844-EXXPAND

The Knapheide Manufacturing Company
1848 Westphalia Strasse
Quincy, IL 62305

Sortimo North America
3055 Northwoods Circle NW
Norcross, GA 30071

Document # 32017740
May 2015