



PRIME DESIGN™

A Safe Fleet Brand

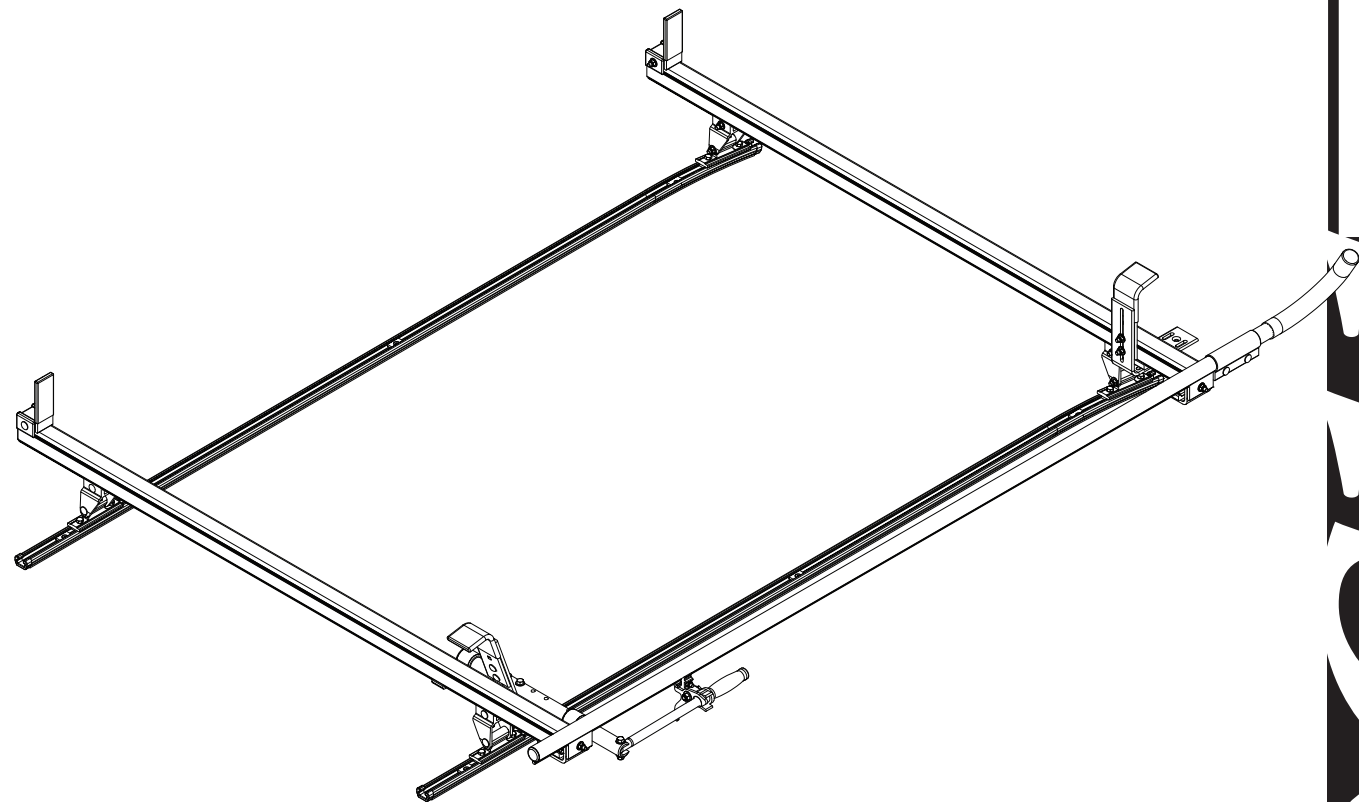

VBC

CONTENTS OVERVIEW

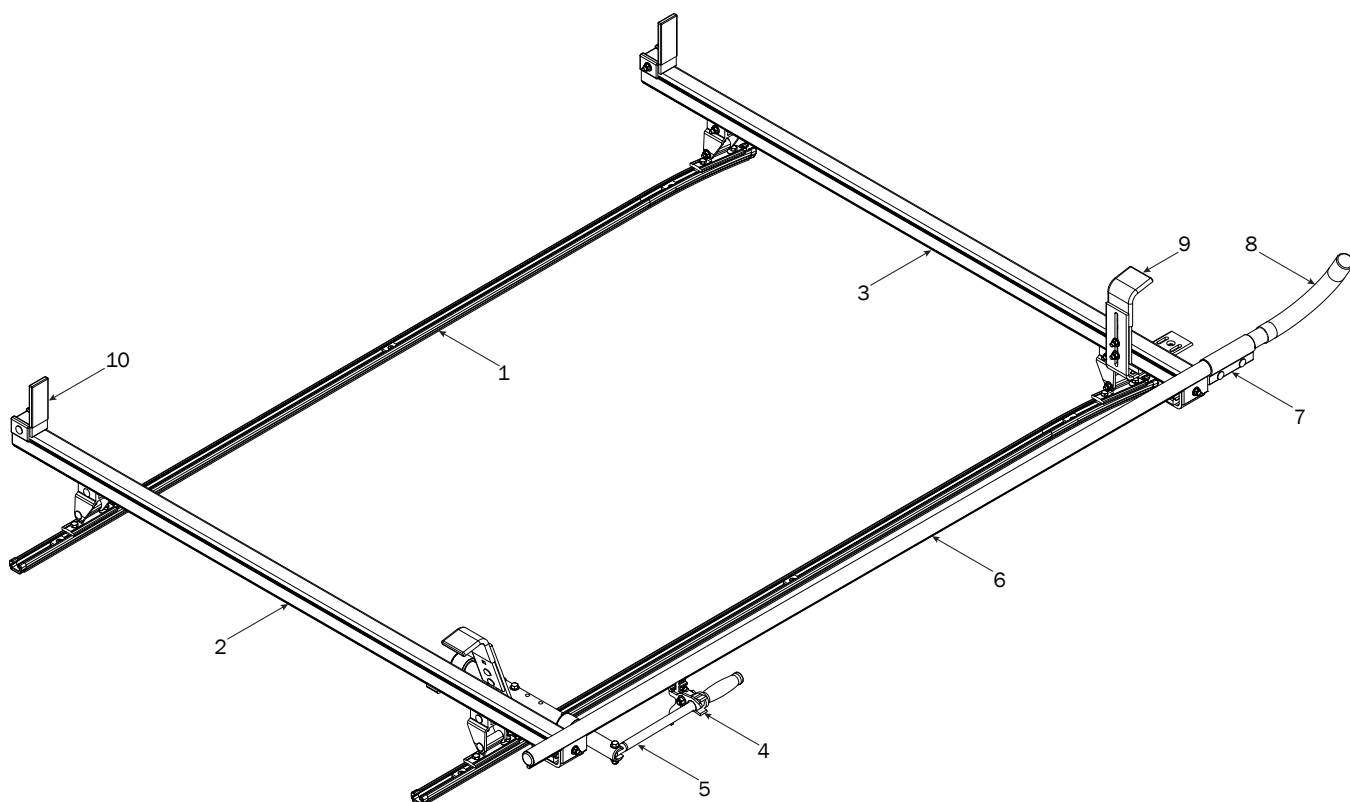

1—FBM-0060 (Qty 1)
Channels with hardware



Left Channel (1X)




Right Channel (1X)




End Caps (4X)




Brackets (4X)

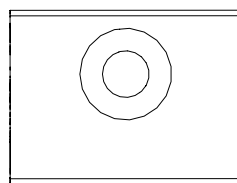

Channel Connector Offset (6X)

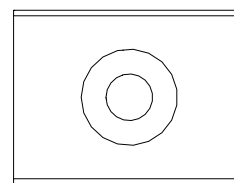

Channel Connector (4X)




M6 Bolt (10X)

2—Rear Crossbar Assembly (Qty 1)




3—Front Crossbar Assembly (Qty 1)




4—Handle Latch Assembly (Qty 1)
Clamp Down, Right Hand



5—Clamp Down Handle Assembly (Qty 1)

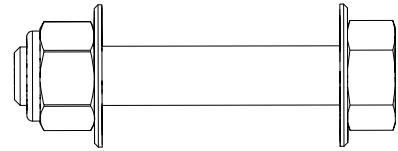


6—Clamp Down Tube (Qty 1)
80.00"




7—Quick Clamp Tube Splice Assembly (Qty 1)
5.00"




8—Removeable Horn..... (Qty 1)
With Cap, 15.00"

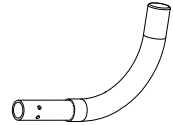


9—HD Front Hook Assembly (Qty 1)

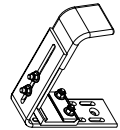

10—Ladder Stop Assembly (Qty 2)
1.75"




11—Anti-Seize..... (Qty 1)

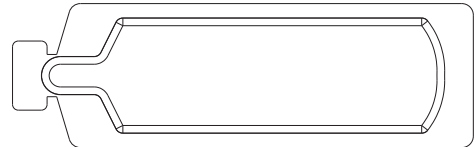


FBM-0060 CHANNELS TO ROOF

0.1 Position Channels as shown below.

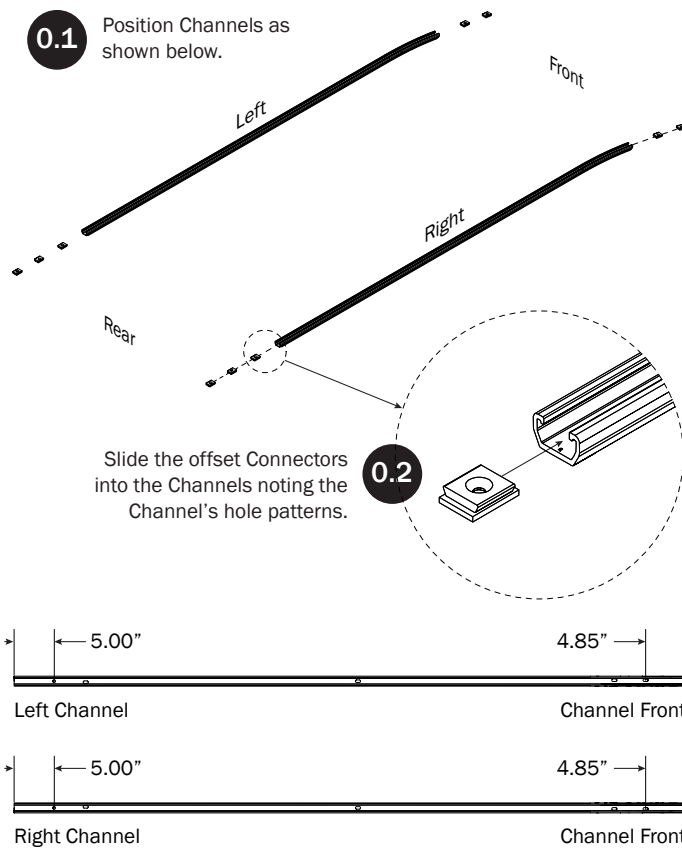

0.2


0.3 Install Channels onto roof.

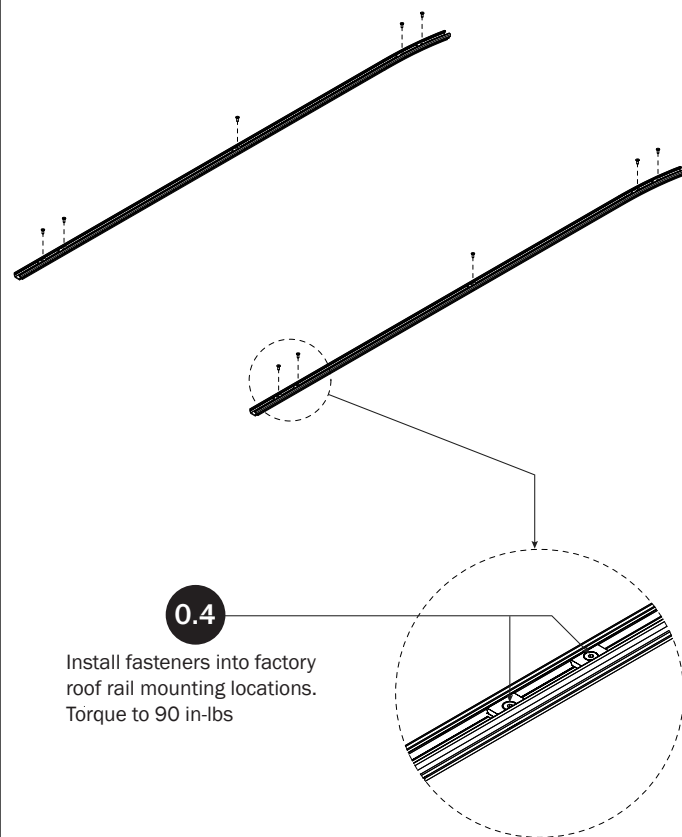

0.4

Install fasteners into factory roof rail mounting locations. Torque to 90 in-lbs


0.6 Set to distances then torque bracket nuts to 90 in-lbs

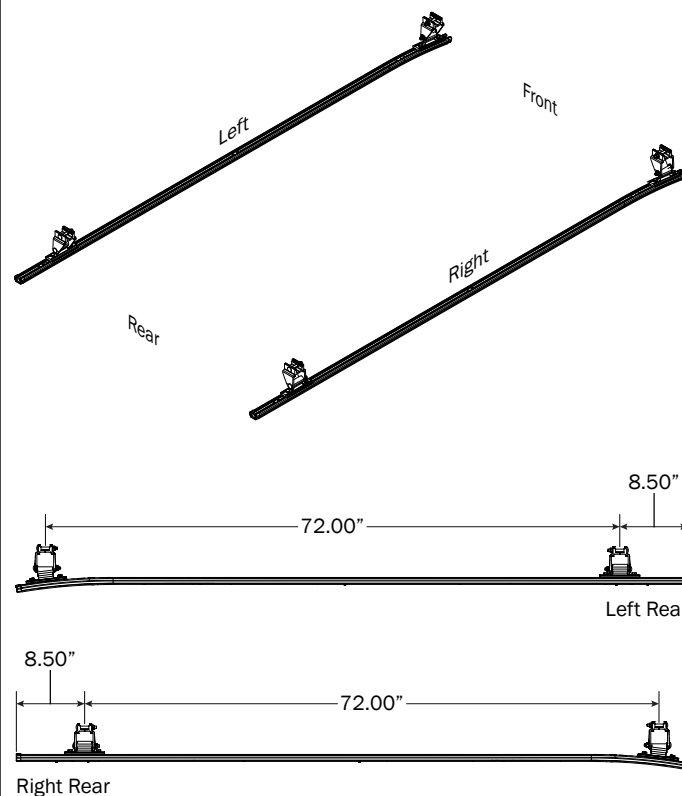


0.5

Loosen bolts


RIGHT CLAMP DOWN ASSEMBLY SEQUENCE




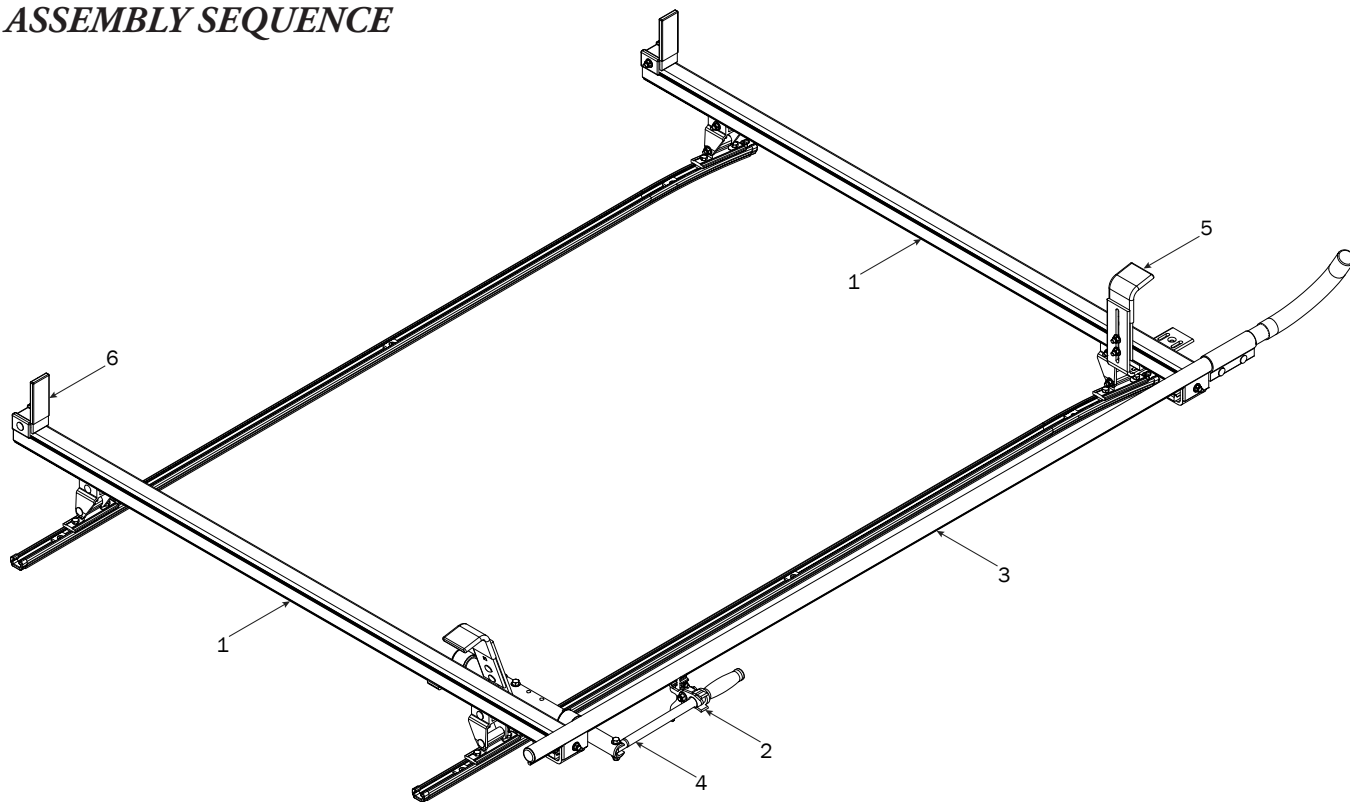


CROSSBARS

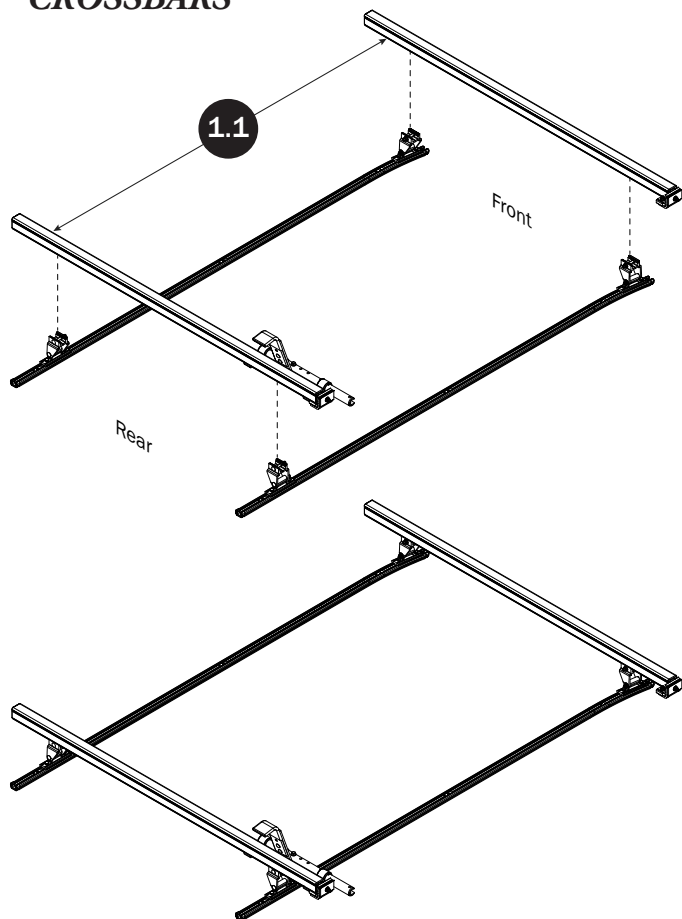


CROSSBAR ADJUSTMENT

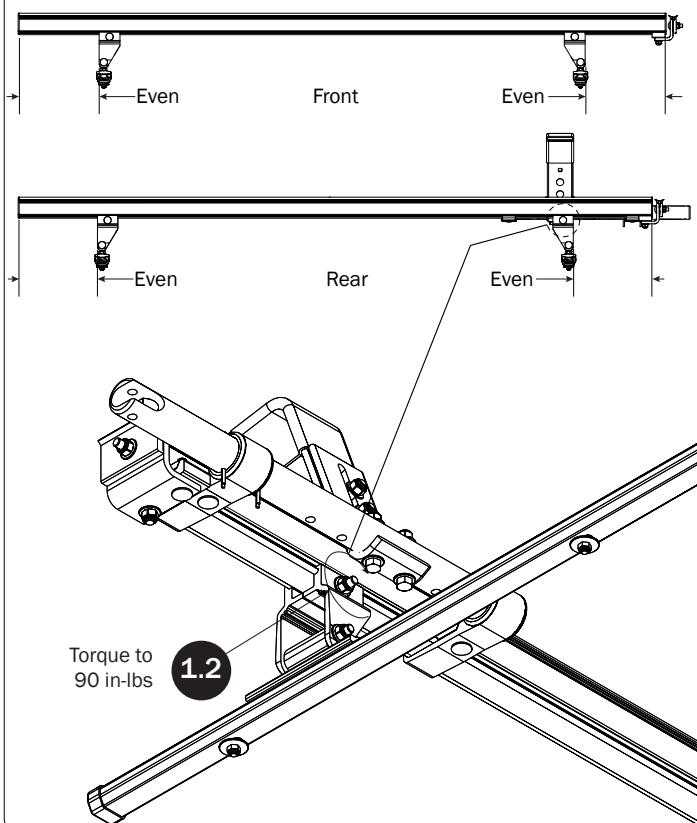


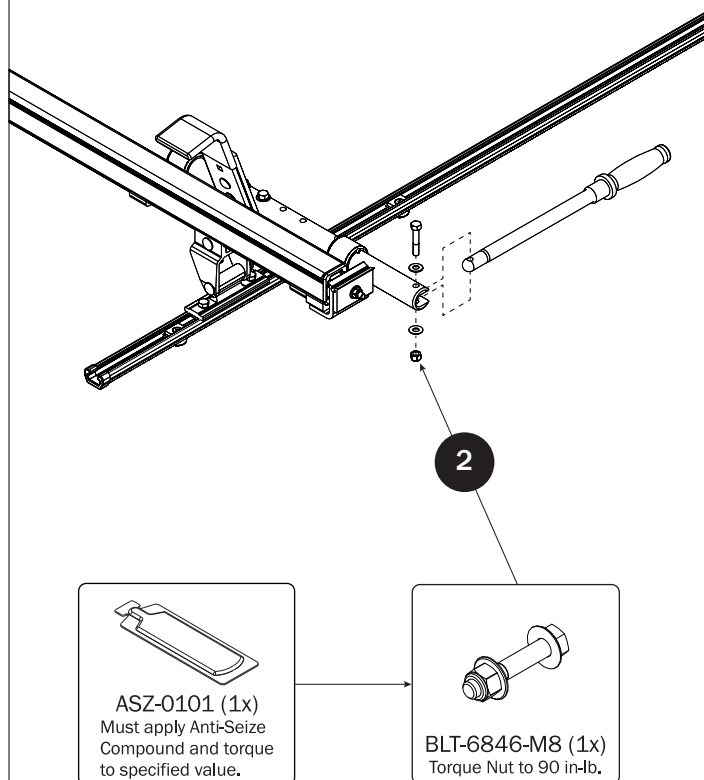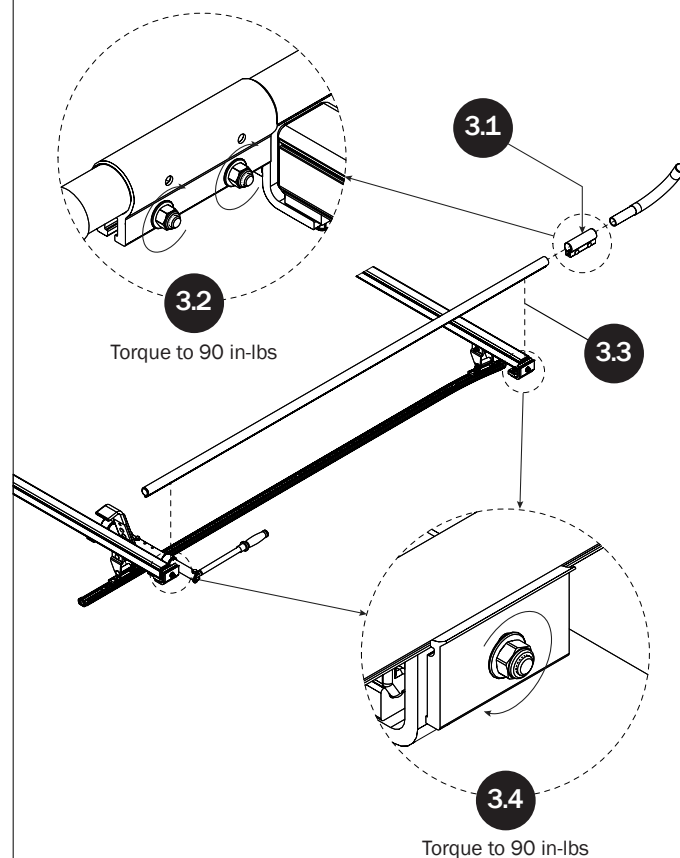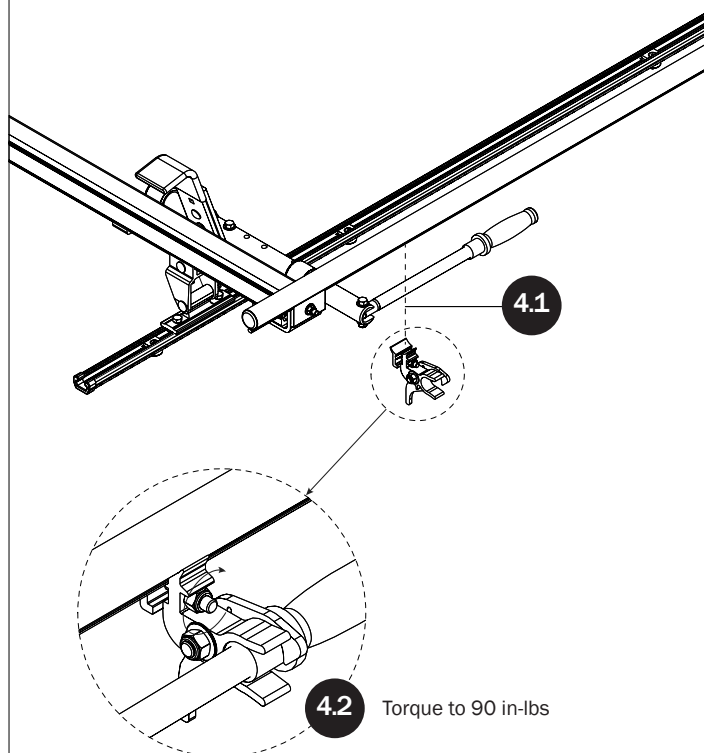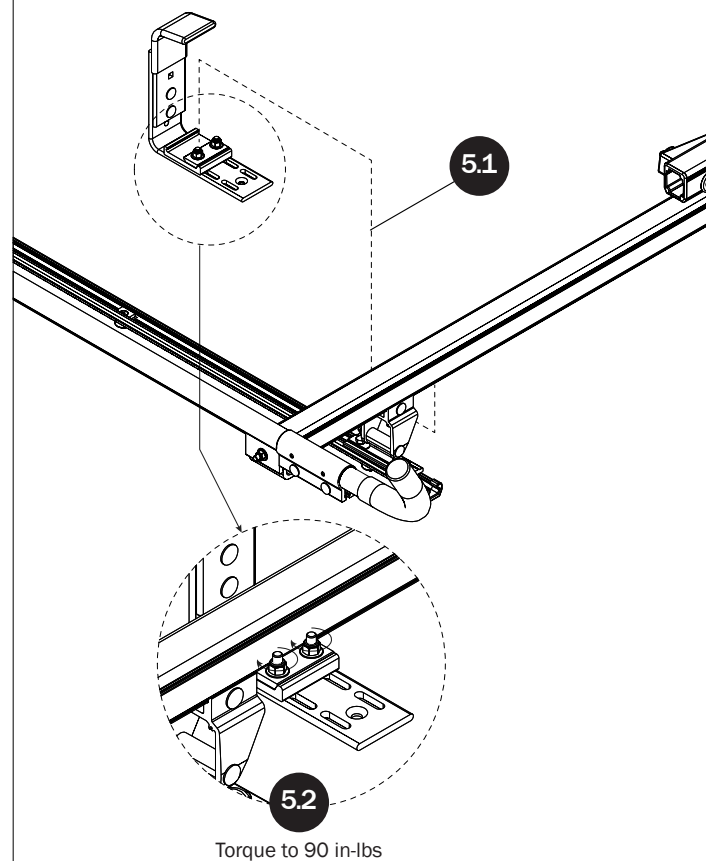CLAMP DOWN HANDLE**CLAMP DOWN TUBE****HANDLE LATCH****FRONT LADDER HOOK**
SEE QUICK START GUIDE FOR ADJUSTMENTS

LADDER STOPS

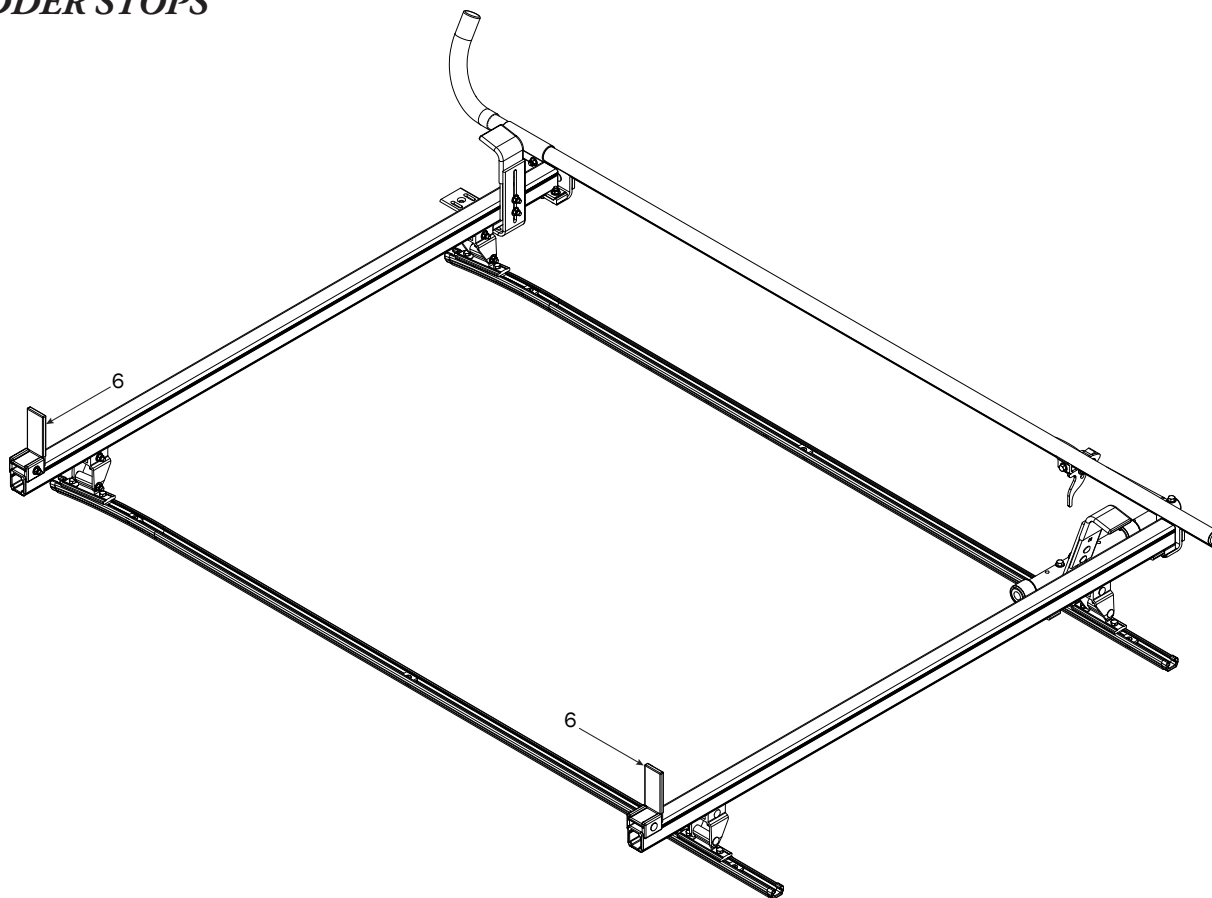

LADDER STOPS

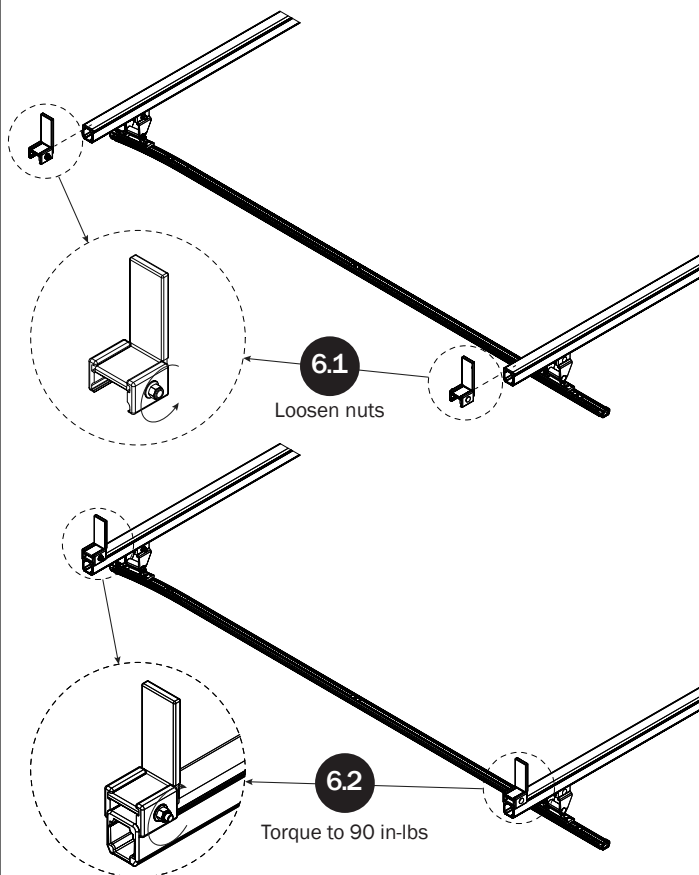

ADDITIONAL INFORMATION

For additional information regarding your VBC-PC11 Ladder Rack, please visit the Prime Design website at: www.primedesign.net.

Using a QR code reader in your smart phone or tablet, read the QR Code shown below and follow the same steps as you would from your laptop or computer.

If you're viewing this document as an interactive PDF, you may simply click on the QR Code below to access the Prime Design website.

