


INSTALLATION GUIDE

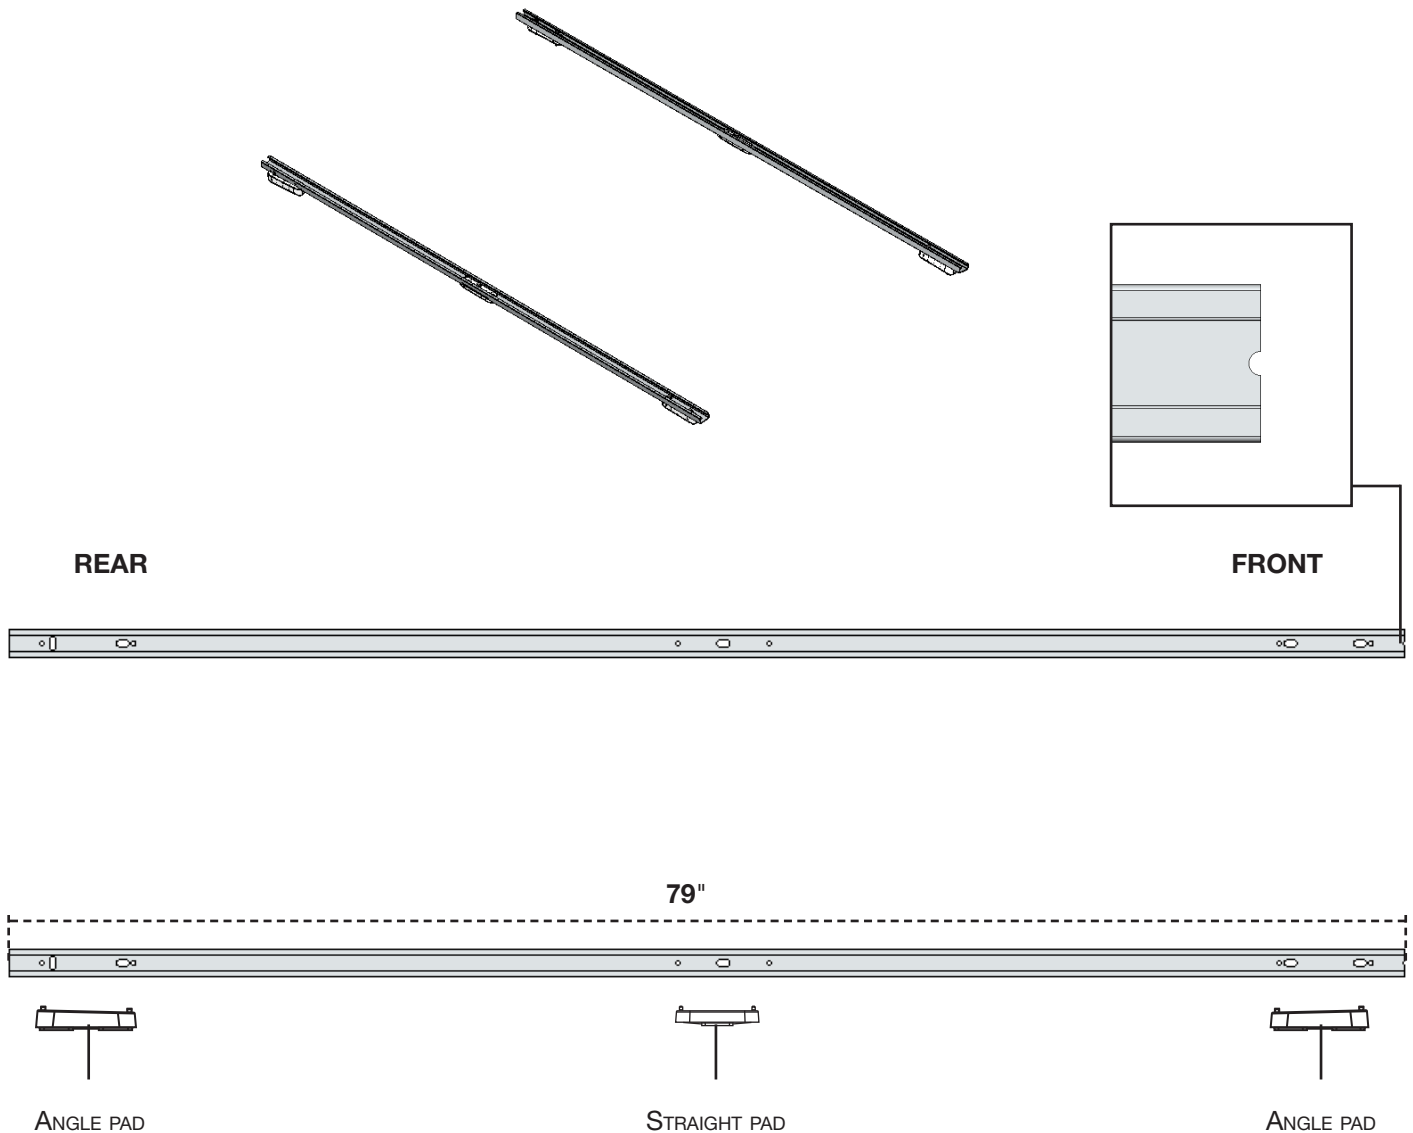

18-U0045 MOUNTING TRACK

PROMASTER CITY

QUICK START GUIDE


PHASE 1 - ASSEMBLY

- 1.1.1 SETUP (VERIFY ALL PARTS ARE PRESENT)..... 2 TO 3

PHASE 2 - INSTALLATION

- 2.1.1 INSTALLATION (INSTALL THE MOUNTING TRACK WITH PADS ON THE ROOF)..... 4

REQUIRED ITEMS

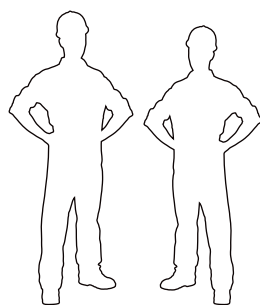


2
PERSONS

- Cordless Impact
- Tape Measure
- Ladder
- 10MM Socket
- Silicone

PHASE 1 – ASSEMBLY

1.1 SETUP

1.1.1 Verify all parts are present.

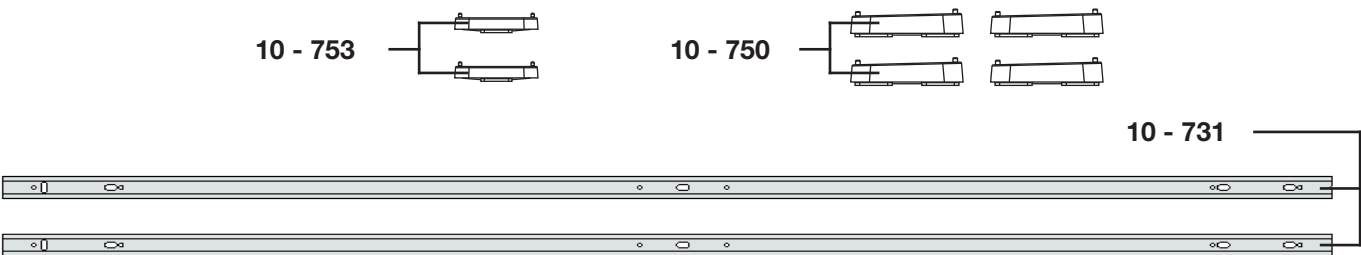

VERIFY ALL PARTS ARE PRESENT

Item No.	Description	Qty.
10-731	MOUNTING TRACK	2
10-750	ANGLE PAD	4
10-753	STRAIGHT PAD	2
96-1031	CUSTOMER INSTALL FASTENER KIT	1

VERIFY ALL PARTS ARE PRESENT

FASTENER BAGS.

96-1031



Fastener Assembly

8x



90-841

Hex Bolt
M6-1.0 x 50MM
SS304

2x



90-837

Hex Bolt
M6-1.0 x 40MM
SS304

10x



10-764

Neoprene Spacer
1/16" Thick

10x



98-113

Flat Washer
1/4"


10x




98-119

Lock Washer
1/4"

8x

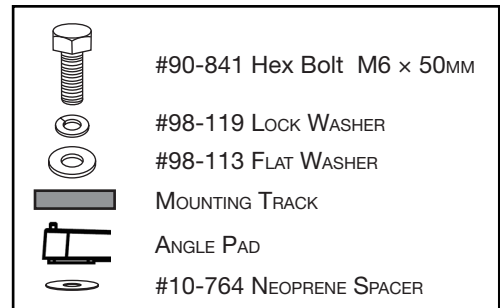




2x

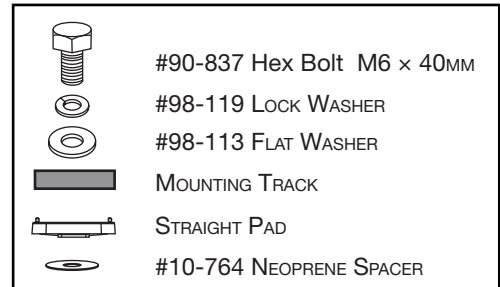

2.1 INSTALLATION


NOTE:

- Slide stud plate on both ends of the mounting track before installing the mounting track.
- Slide 3 stud plates if you have 3 bar racks.

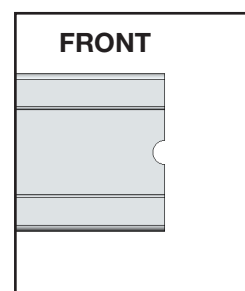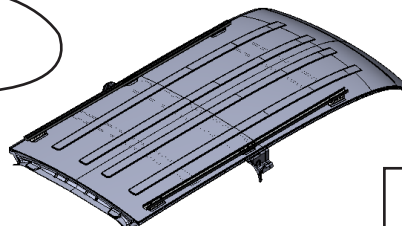


MIDDLE

SHOWING WHAT HOLES YOU WILL USE



SHOWING THE POSITION OF THE PADS



- ☐ Cordless Impact
- ☐ 10MM Socket
- ☐ Silicone




10



#10-764 NEOPRENE SPACER



#10-764 NEOPRENE SPACER

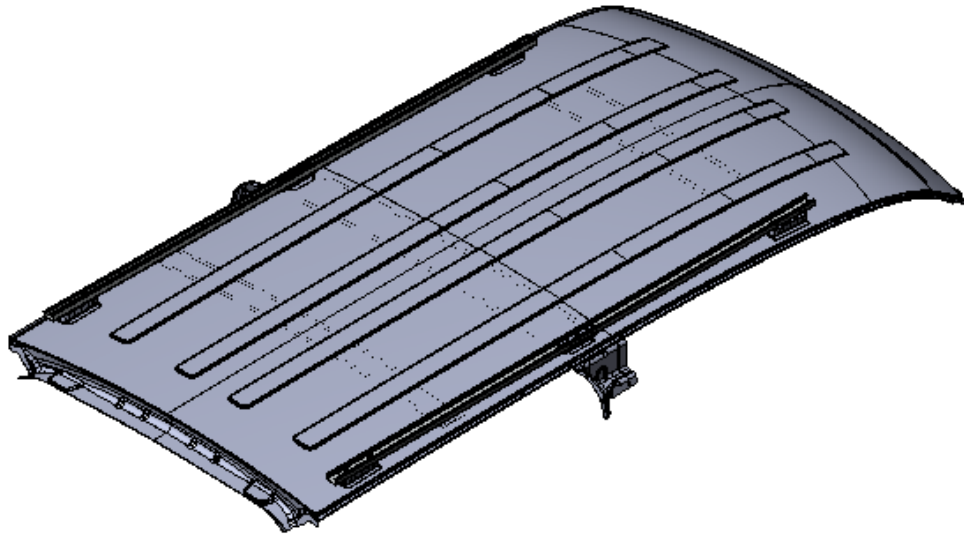

**“Congratulations, you have successfully installed your
Mounting Track on your vehicle!**

Thank you for doing business with us.”

For any feedback or suggestions you might have, please contact: [**cs@rangerdesign.com**](mailto:cs@rangerdesign.com)

